



Pro:Idiom[®] Encryption Module



Stock #	Model Name	Description
6793 QS	NXG-PI-QAM-S	NXG Pro:Idiom Secure Encryption Module for MPTS; 72 programs

We recommend that you write the following information in the spaces provided below.

Purchase Location Name:	
Purchase Location Telephone Number:	
NXG-PI-QAM-S Module Serial Number(s):	

The information contained herein is subject to change without notice. Revisions may be issued to advise of such changes and/or additions.

Correspondence regarding this publication should be addressed directly to:

Blonder Tongue Laboratories, Inc.
One Jake Brown Road
Old Bridge, NJ 08857 USA

Document Number: 651254500A

Printed in the United States of America.

All product names, trade names, or corporate names mentioned in this document are acknowledged to be the proprietary property of the registered owners.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Reverse engineering or disassembly is prohibited.

Pro:Idiom is a registered trademark of Zenith Electronics Corporation.

Cross-Reference & Hyperlinking Usage

This guide makes use of hyperlinks for the Table of Contents, some cross-reference linking between sections, and external hyperlinking to web addresses. This has been done to assist the reader in finding the information they are seeking in a much quicker way. In addition to hyperlinking, the Table of Contents also makes use of the bookmarking feature present in the Adobe Reader application.

Product and Documentation Updates

Download the latest User Manual (PDF) by visiting our website. Navigate to the product page by entering the full Model Name or Stock Number in the search field. Upon reaching the product page, the “User Manual” download link will be located beneath the product image. **Firmware Updates** are available under “Tech Support” in the “Resources” section of the website. General instructions for the FTP site, as well as updating your firmware, are provided on this page.

Returning Product for Repair (or Credit)

A Return Material Authorization (RMA) Number is required on all products returned to Blonder Tongue, regardless if the product is being returned for repair or credit. Before returning product, please contact the Blonder Tongue Service Department at 1-800-523-6049, Ext. 4256 or visit our website: www.blondertongue.com for further information.

Table of Contents

SECTION 1 – GENERAL & SAFETY INSTRUCTIONS.....	4
SECTION 2 – PRODUCT SUMMARY	5
2.1 PRODUCT APPLICATION & FEATURES.....	5
2.2 MODULE SPECIFICATION	6
2.3 MODULE INSTALLATION.....	6
SECTION 3 – MODULE STATUS AND GENERAL MANAGEMENT	7
3.1 “STATUS” TAB.....	7
3.2 “SYSTEM” TAB.....	8
SECTION 4 – TRANSPORT STREAM	9
4.1 CONFIGURATION SETTINGS AND PARAMETERS	9
4.2 ADDING TRANSPORT STREAM(S) TO BE ENCRYPTED	10
4.3 REMOVING TRANSPORT STREAM(S) FROM ENCRYPTION	11
4.4 SEARCH FUNCTION AND ADDITIONAL CONTROLS	11
SECTION 5 – FIRMWARE UPDATES	12
SECTION 6 – TROUBLESHOOTING.....	13

Section 1 – General & Safety Instructions



The STOP sign symbol is intended to alert you to the presence of REQUIRED operating and maintenance (servicing) instructions that if not followed, may result in product failure or destruction.



The YIELD sign symbol is intended to alert you to the presence of RECOMMENDED operating and maintenance (servicing) instructions.



The LIGHTNING flash symbol is intended to alert you to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.

TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER FROM THIS UNIT.
NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE

NOTE TO CATV SYSTEM INSTALLER


This reminder is provided to call the CATV System Installer’s attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.



You should always follow these Instructions to help ensure Against injury to yourself and damage to your equipment.

- Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature per Section 2.3.
- Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
- Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips).
- Read all safety and operating instructions before you operate the unit.
- Retain all safety and operating instructions for future reference.
- Heed all warnings on the unit and in the safety and operating instructions.
- Follow all installation, operating, and use instructions.
- Unplug the unit from the AC power outlet before cleaning. Use only a damp cloth for cleaning the exterior of the unit.
- Do not use accessories or attachments not recommended by Blonder Tongue, as they may cause hazards, and will void the warranty.
- Do not operate the unit in high-humidity areas, or expose it to water or moisture.
- Do not place the unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious personal injury and damage to the unit. Install the unit only in a mounting rack designed for 19” rack-mounted equipment.
- Do not block or cover slots and openings in the unit. These are provided for ventilation and protection from overheating. Never place the unit near or over a radiator or heat register. Do not place the unit in an enclosure such as a cabinet without proper ventilation. Do not mount equipment in the rack space directly above or below the unit.
- Operate the unit using only the type of power source indicated on the marking label. Unplug the unit power cord by gripping the plug, not the cord.
- The unit is equipped with a three-wire ground-type plug. This plug will fit only into a ground-type power outlet. If you are unable to insert the plug into the outlet, contact an electrician to replace the outlet. Do not defeat the safety purpose of the ground-type plug.
- Route power supply cords so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.

- Be sure that the outdoor components of the antenna system are grounded in accordance with local, federal, and National Electrical Code (NEC) requirements. Pay special attention to NEC Sections 810 and 820. See the example shown in the following diagram:

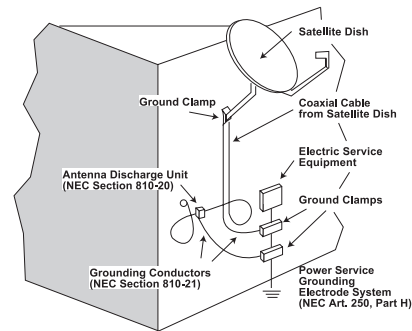

- We strongly recommend using an outlet that contains surge suppression or ground fault protection. For added protection during a lightning storm, or when the unit is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the lines between the unit and the antenna. This will prevent damage caused by lightning or power line surges.
- Do not locate the antenna near overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing the antenna, take extreme care to avoid touching such power lines or circuits, as contact with them can be fatal.
- Do not overload wall outlets or extension cords, as this can result in a risk of fire or electrical shock.
- Never insert objects of any kind into the unit through openings, as the objects may touch dangerous voltage points or short out parts. This could cause fire or electrical shock.
- Do not attempt to service the unit yourself, as opening or removing covers may expose you to dangerous voltage and will void the warranty. Refer all servicing to authorized service personnel.
- Unplug the unit from the wall outlet and refer servicing to authorized service personnel whenever the following occurs:
 - The power supply cord or plug is damaged;
 - Liquid has been spilled, or objects have fallen into the unit;
 - The unit has been exposed to rain or water;
 - The unit has been dropped or the chassis has been damaged;
 - The unit exhibits a distinct change in performance.
- When replacement parts are required, ensure that the service technician uses replacement parts specified by Blonder Tongue. Unauthorized substitutions may damage the unit or cause electrical shock or fire, and will void the warranty.
- Upon completion of any service or repair to the unit, ask the service technician to perform safety checks to ensure that the unit is in proper operating condition.

Section 2 – Product Summary

2.1 Product Application & Features

Application:

The **NXG-PI-QAM-S** inputs MPEG-compliant transport streams through the NXG IP backplane to add Pro:Idiom® encryption for both MPTSs (multiple program transport streams) and SPTSs (single program transport streams). Once transport stream(s) have been Pro:Idiom encrypted, they are placed onto the NXG backplane for distribution to other module(s) within the NXG platform. This module has been optimized to support MPTSs; therefore, encryption density for SPTSs is reduced versus NXG-PI-IP-S which has been optimized for SPTSs.

The NXG-PI-QAM-S module has been designed to work with the NXG-32CH-QM module to seamlessly Pro:Idiom encrypt MPTSs generate by a NXG-32CH-QM module. The Pro:Idiom encrypted transport stream(s) can then be re-ingested by the NXG-32CH-QM module for distribution out the NXG platform via QAM.

The implemented Pro:Idiom encryption is compatible with existing Pro:Idiom decryption devices, such as TVs and set-top boxes commonly used in many hospitality locations.

Features:

- Adds digital content protection for QAM video delivery
- Supports MPTS format
- Reliable, secure way to protect digital HD content
- Supports 72 programs

Description:


a STATUS LED:

LED is Off = Indicates the module is not correctly connected or receiving power.

LED is Green = Indicates the module is running without errors.

LED is Red = Indicates that one or more errors have been detected.

LED is Amber = Indicates that one or more warnings have been detected.

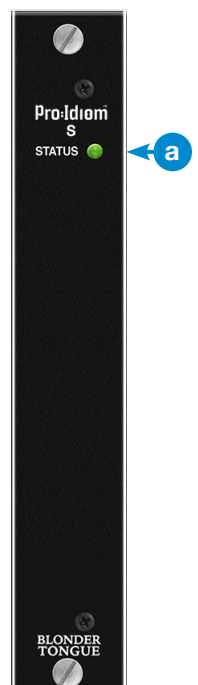

2.2 Module Specification

Input

IP:	2.2 Gb Clear transport streams
------------	--------------------------------

Alarms/Monitoring

Front Panel Indicator:	1x Status LED (bicolor red/green)
-------------------------------	-----------------------------------

Output

IP:	2.2 Gb Pro:Idiom® encrypted transport streams
------------	---

General

Dimensions (W x D x H):	1.15" x 15.5" x 7.0" (29 x 394 x 178 mm)
Power:	Via NXG Mainframe Backplane
Power Consumption:	13 W
Weight:	2.0 lbs (0.9 kg)
Operating Temperature:	32 to 122 °F (0 to 50 °C)
Storage Temperature:	-13 to 158 °F (-25 to 70 °C)
Operating/Storage Humidity:	0 to 95% RH @ 35 °C max, non-condensing

2.3 Module Installation

For general module installation instructions, please refer to the NXG Base Platform User Manual.

Section 3 – Module Status and General Management

3.1 “Status” Tab

The “Status” tab (Figure 3.1a) is a read-only screen which displays general health and module information. The information is provided as a quick way to monitor the module or assist with troubleshooting issues that may arise.

Status	TS Selection	System
Module Status		
1	Module Status	Ok
2	Module Temperature	127.1 °F
Detected Issues		
3	No issues detected	
Module Information		
4	Serial Number	2018060450
5	Software Version	1.0.0.0_20201014
6	Backplane Firmware Version	1.10
7	P-I Core: FPGA 1 Firmware Version	1.4
8	P-I Core: FPGA 2 Firmware Version	1.4
9	Slot Location	10

Figure 3.1a - “Status” Tab - Full View

In the section entitled “**Module Status**”, the following parameters about the module health are displayed:

- 1 **Module Status:** Indicates the current status of the module. Status Levels shown below:
 - Ok** - No issues at the current time
 - Error** - One or more errors have occurred. Check system log for more information on error(s).
 - Warnings** - One or more warnings have been triggered. Check system log for more information.
- 2 **Temperature:** Indicates the temperature of the module.

In the section entitled “**Detected Issues**”, the module will display if any issues arise. The problem will be shown here and the color will correlate to the urgency of the issue.

- 3 When there are no issues, the text will say “No issues detected” (See Figure 3.1a) and remain black text color. When there is an error, error message(s) (see Figure 3.1b) will be displayed using **red** text.

Detected Issues
Module 7 - ESP2H_735 Program not detected in master streams list.

Figure 3.1b - “Status” Tab - Detected Issues

In the section entitled “**Module Information**”, the following module-specific information is displayed:

- 4 **Serial Number:** Indicates the serial number of the module installed.
- 5 **Software Version:** Indicates the software version of the module. To update software, please see “**Section 5 - Firmware Updates**”.
- 6 **Backplane Firmware Version:** Indicates the backplane firmware version for this module. Backplane version is only needed for tech support and software debugging.
- 7 **PI-Core: FPGA 1 Firmware Version:** Indicates the FPGA 1 firmware version for this module. This firmware version is only needed for tech support and software debugging.
- 8 **PI-Core: FPGA 2 Firmware Version:** Indicates the FPGA 2 firmware version for this module. This firmware version is only needed for tech support and software debugging.
- 9 **Slot Location:** Indicates the slot location number in the NXG platform chassis where the module is installed. See diagram in the **NXG Platform** Quick Guide or User Manual for more information on slot location numbers.

3.2 “System” Tab

The “System” Tab (Figure 3.2) allows the user to manage the module configuration through the following controls:

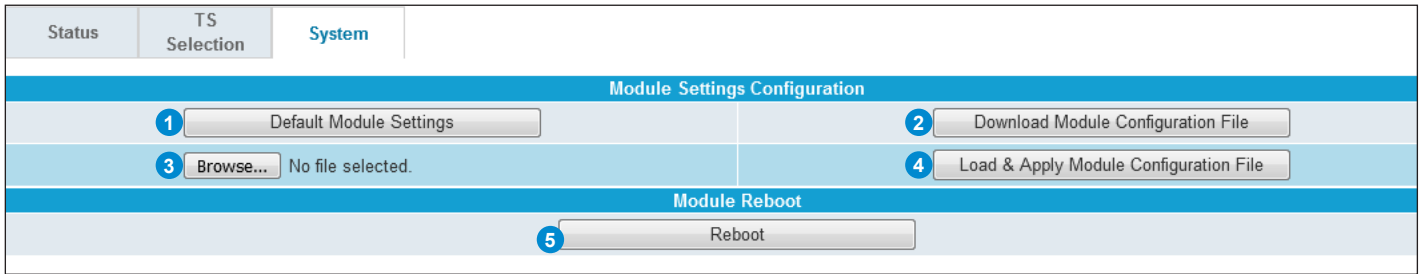


Figure 3.2 - “System” Tab

The “Module Settings Configuration” section allows the user to back-up and re-load the configuration settings.



- 1 Resets the module back to the Factory defaults. It is always recommended to save the existing configuration file before resetting to the default values.
- 2 Downloads the current module configuration file.
- 3 No file selected. Browse and select a Configuration File.
- 4 After selecting a file, click this to load and apply the configuration file.

The “Module Reboot” section allows the user to reboot the module from this screen.

- 5 Click this button to reboot the module.


Section 4 – Transport Stream


The “**TS Selection**” Tab allows a user to select which available input transport streams to Pro:Idiom encrypt. Every program within a selected transport stream will be Pro:Idiom encrypted. Pro:Idiom encryption requires that an MPTS must contain 24 or fewer programs.


NOTE: Clicking the small arrow ( collapsed;  expanded) beside each program will show or hide further choices or read-only data.

4.1 Configuration Settings and Parameters

The “**Available Inputs**” column shows a list of all transport streams available on the NXG platform which can be encrypted. The following read-only information is shown:

 **Module (Number):** Displays available transport streams placed on NXG platform's backplane by other NXG modules. Examples shown in Section 4: NXG-32CH-QM in slot 12.

 **Source Stream:** Displays the Source Stream Name and bandwidth (Mb/s). An empty checkbox () can be checked () to select transport stream(s) to be added to the Output Transports column.

When the line is expanded, the following data () for each program is shown:

- 1 **Short Channel Name:** 7-letter name for the channel assigned to the program in the Virtual Channel Table.
- 2 **Program Number:** MPEG program number used in all PSI tables for this stream.
- 3 **Virtual Channel Number:** Channel number assigned to the program by the Virtual Channel Table (VCT).
- 4 **Average Bitrate:** The bitrate is calculated over a period of time to give you the average bitrate of each program within a transport stream.
- 5 **Peak Bitrate:** The peak bitrate shows the maximum bitrate of that program.

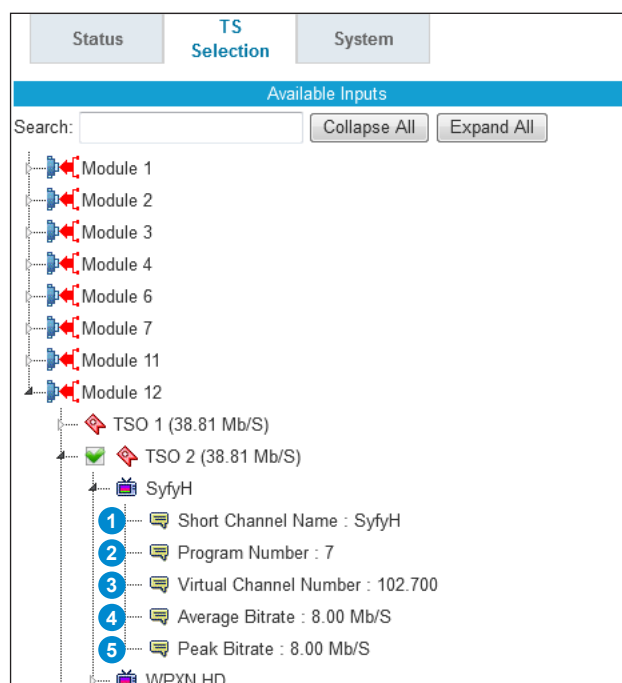


Figure 4.1a - Parameters - Available Inputs

The “**Selection Control**” column provides controls to “**Add**” and “**Remove**” transport streams from Pro:Idiom encryption as well as the following read-only information:

Available Resources

- 6 **TS (Transport Stream):** Displays the available transport streams left. As each transport stream is added, the “**TS**” column number ticks downward. The maximum supported is 72 streams or 72 programs, whichever comes first.
- 7 **Prog: (Programs):** Displays the number of available programs left. The maximum supported is 72.
- 8 **BW (Bandwidth):** Displays the available backplane interface bandwidth used to ingest and egress transport stream(s) to the NXG backplane.

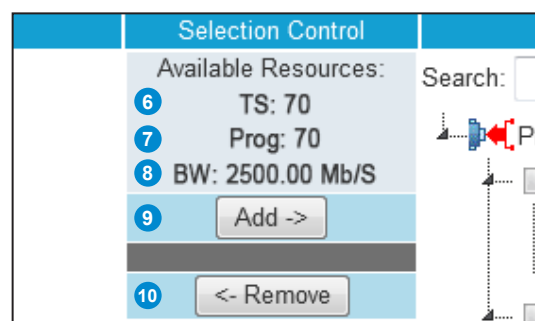




Figure 4.1b - Parameters - Selection Control






NOTE: If a transport stream has not yet been selected for encryption, an empty checkbox () will show up beside the transport stream, under “Available Inputs”.

4.1 Configuration Settings and Parameters (continued)

- 9  When one or more transport streams are selected from the “Available Inputs” column, pressing the Add button will immediately add the transport stream(s) to the Output Transports column, indicating Pro:Idiom encryption will be done for those transport stream(s). The output transport stream(s) are automatically made available to the other NXG modules connected to the NXG unit's backplane.
- 10  When one or more transport streams are selected from the “Output Transports” column, pressing the Remove button will immediately remove the transport stream(s) from the Output Transports column, indicating Pro:Idiom encryption is no longer being performed on that transport stream.

The “Output Transports” column shows a list of all transport streams that are being Pro:Idiom encrypted. The following read-only information is shown:

-  **Pro Idiom Encryption:** Only transport streams which are being encrypted will show up in this column.
 -  **Stream Name:** Displays the Source Stream Name and bandwidth (Mb/s). An empty checkbox () can be checked () to select one or more transport streams to be removed from the Output Transports column.
- When the line is expanded, the following data () for each program is shown:

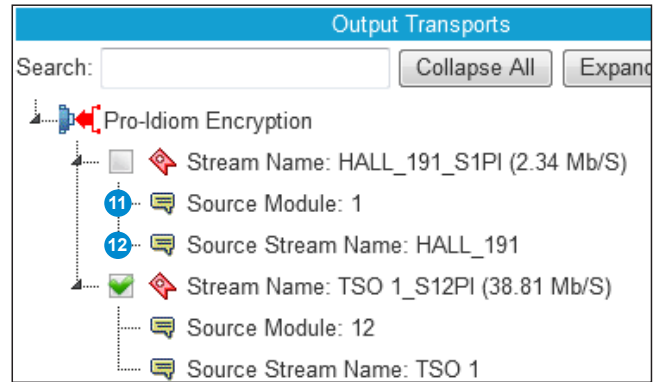


Figure 4.1c - Parameters - Output Transports

- 11 **Source Module:** Displays the module number sourcing the transport stream. Numbered modules correlate with what is currently installed and running in the NXG platform chassis. Example shown within Section 4 is from NXG-32CH-QAM.
- 12 **Source Stream Name:** The assigned name within the NXG unit for the source transport stream.

4.2 Adding Transport Stream(s) to be Encrypted

Within the “Available Inputs” column and under each numbered module, the user can select available transport stream(s) for Pro:Idiom encrypting. Transport streams shown under the “Output Transports” column have been selected to be Pro:Idiom encrypted.

- 1 **Locating Transport Stream(s):** Each transport stream can be located manually by clicking open the modules and the programs in order to view more in-depth information about each transport stream and its program(s). Additional controls at the top of “Available Inputs” are a Search field, if the user knows which transport stream(s) they are intending to encrypt, and the **Collapse All/Expand All** buttons, allowing the user to see all information at once. This is especially useful when first setting up the Encryption Module.
- 2 **Choosing Transport Stream(s)** To add, locate the desired transport stream and if it is available, check the empty box next to it.

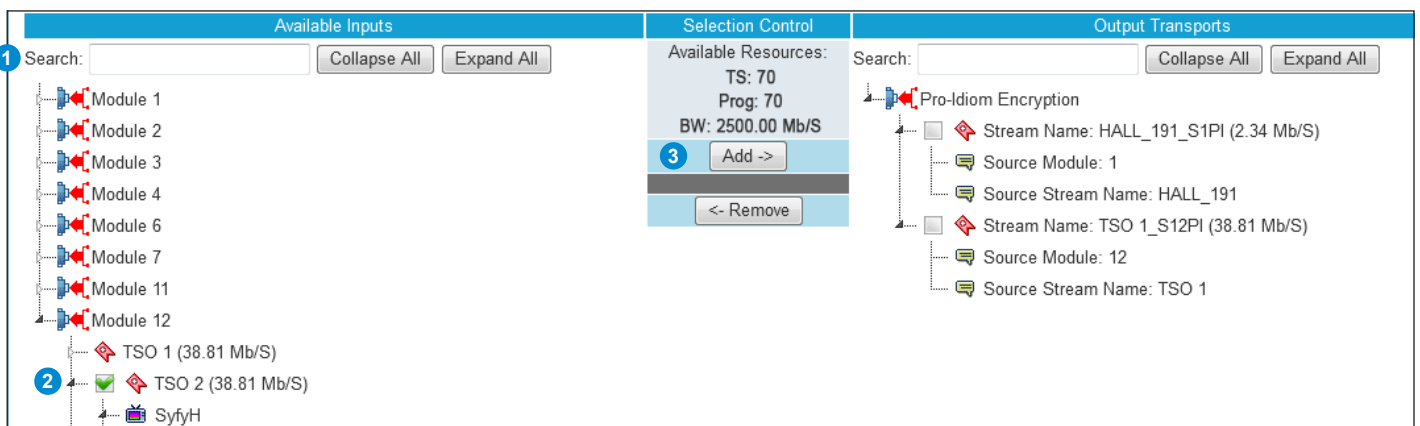


Figure 4.2 - “Transport Stream” Tab - Adding Transport Stream(s)

4.2 Adding Transport Stream(s) to be Encrypted (continued)

- 3 **Adding Transport Stream(s):** Click “Add” and the transport stream will be added to the “Output Transports” column.

NOTE: An empty check box will always appear next to available transport streams. This check box will not appear next to a transport stream under the “Available Inputs” column if the transport stream has already been added to the “Output Transports” column.

4.3 Removing Transport Stream(s) from Encryption

Within the “Output Transports” column, the user can locate the transport stream(s) they wish to no longer Pro:Idiom encrypt. Once the transport stream is no longer being Pro:Idiom encrypted, it will become available under the “Available Inputs” column to be encrypted again.

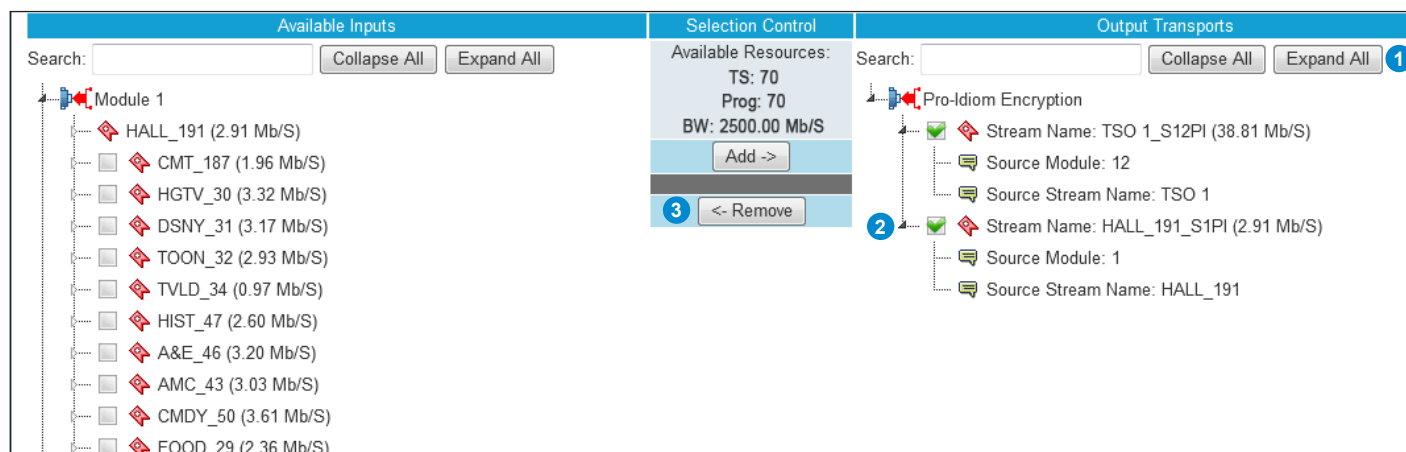


Figure 4.3 - “Transport Stream” Tab - Removing Transport Stream(s)

- 1 **Locating Transport Stream(s):** Each transport stream can be manually located by clicking open the transport stream in order to view more in-depth information about each transport stream. Additional controls at the top of “Output Transports” are a Search field, if the user knows which transport stream(s) they intend to remove, and the **Collapse All/Expand All** buttons, allowing the user to see all information at once.
- 2 **Choosing Transport Stream(s):** To remove, locate the desired transport stream and check the box next to the transport stream to select.
- 3 **Removing Transport Stream(s):** Click “Remove” and the transport stream will be made available once again within the “Available Inputs” column and removed from the “Output Transports” column.

4.4 Search Function and Additional Controls

As previously pointed out in the prior sections, the search field and additional controls are provided for easier management and setup of the transport streams.

The “Search” function is provided as a way to easily find transport stream(s) and their program(s) within a list. This standard function is real-time, acting as a filter to isolate matches as the user types into the input field.

The “Collapse All” and “Expand All” buttons are also provided, in addition to the search function, in order to further filter data.

An example of a numeric search is shown to the right. The filtered lines with the matching search terms will highlight in a **bold red-colored** text, while the rest of the programs will be hidden until the search input is cleared out or a new search is performed.

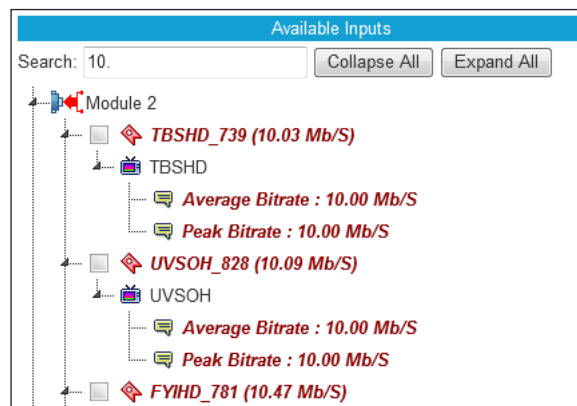


Figure 4.4 - Search and Additional Controls

Section 5 – Firmware Updates

The “Firmware Update” tab (Figures 5a, 5b, 5c, and 5d) is part of the Master Controller Module interface, and is used for all installed modules. It is located on the right side of the main menu allowing the user to review currently installed firmware versions and quickly update installed module(s).

Firmware Update Files			
Browse... No file selected.		Upload File	
Firmware Update Control and Status			
Module	Firmware Version	Update Control	Status
Master Controller (NXG-CNTRL)	1.2.1.0_20200505	Update	
24 Prog CableCARD In (NXG-CCQD-24)	1.1.1.3_20210107	Update	
24 Prog Clear QAM In (NXG-CQAM-24)	1.0.1.0_20190820	Update	
IP SPTS In/Out (NXG-IP)	1.0.2.1_20200311	Update	
4Ch HDMI Encode (NXG-HDMI4)	1.0.0.5_20201109	Update	
32Ch QAM PI PT (NXG-QAM32-PI-PT)	1.0.1.0_20201015	Update	

Figure 5a - “Firmware Update” Tab

- 1 Check “**Firmware Version**” to ensure you have the latest firmware. To determine if a new firmware update has been released, please go to our website at: (www.blondertongue.com/page/resources/tech-support/firmware-updates/)
Click the “Download Firmware Updates” link and then scroll down to the “NeXgen Gateway” folder to view the NXG module folders.

Note: There is a check of the file name versus module ID to prevent a user from inadvertently updating any modules with incorrect files. Multiple modules can be updated simultaneously after uploading the required field update file(s).

- 2 Under the “**Firmware Update Files**” section, the user can use **Browse...** and **Upload File** to select and send the module update file(s) into the NXG Platform. Figure 5b shows a successful upload of a field update file for the module.

Firmware Update Files			
Browse... No file selected.		Upload File	NXG-QAM32-PROIDIOM-PT Update File: 1.0.1.0_20201015 X

Figure 5b - File when uploaded

- 3 Update the Firmware version by clicking the **Update** button. The update status and progress will show under the “**Status**” columns. Below are the firmware updates as they appear while in-progress (Figure 5c) and upon completion (Figure 5d). After the update is complete, the user **MUST** reboot the module before the update will take effect.

Note: After clicking the “**Update**” button, please allow a few seconds for the file to load.

Module	Firmware Version	Update Control	Status
32Ch QAM PI PT (NXG-QAM32-PI-PT)	1.0.1.0_20201015	Update	Updating System Files

Figure 5c - Update In Progress

- 4 Once the update progress is complete, the user **MUST** click the **Reboot** button (as shown on Figure 5d) for the update to take effect. Updates do not take effect following the update process until the unit has either been rebooted or power cycled. The module cannot be updated again until the module has been rebooted.

Module	Firmware Version	Update Control	Status
32Ch QAM PI PT (NXG-QAM32-PI-PT)	1.0.1.0_20201015	Reboot	Update Complete

Figure 5d - Completed Update



When firmware updates are complete, the user can remove the loaded file by clicking the **X** button shown on Figure 5b next to the “Upload File” button under “Firmware Update Files”.

Section 6 – Troubleshooting

For technical support please contact us at 1-800-523-6049 between the hours of 8am and 5pm EST.

Please refer to the operation manuals of each module for additional information.

Extended Warranty Program

STANDARD TERMS & CONDITIONS OF THE EXTENDED WARRANTY

A. THE EXTENDED WARRANTY AGREEMENT (EWA)

If during the period following the expiration of the Blonder Tongue Manufacturers' Standard Warranty (Copy Included) the products which constitute the subject matter of the extended warranty, manifest any manufacturing or similar such defects then Blonder Tongue shall at its option repair or replace the product. It is emphasized that the extended warranty is in effect an extension of the Blonder Tongue Warranty and covers the items stipulated in Paragraph B to the exclusion of the terms in Paragraph C of this agreement. Eligibility to purchase EW is limited to 90 days following initial shipment on selected products of sufficient value.

The product/products included in this extended warranty agreement are listed in the invoice that accompanies the EWA. Term of the extension will be _____ year(s). Purchase Order is required for extended warranty coverage.

B. WHAT IS COVERED?

1. If a product has been determined to have failed, which falls within the Terms & Conditions of this EWA, Blonder Tongue Inc. may at its sole discretion repair, modify or replace its component parts that are defective at 100% coverage for parts and labor.
2. A loaner unit may be available on request; PO required.
3. Product is manufactured by Blonder Tongue.
4. Extended warranty period is up to and not to exceed 24 months and sold in increments of 12 months. Order # 9981 for 1 year and #9982 for 2 year extensions.
5. Return of repair or replaced product shipping costs for ground shipments.
6. Firmware upgrades at no charge with automatic notification.

C. WHAT IS NOT COVERED?

1. The warranty does not cover any defects caused by foreign objects /connection errors .
2. Use other than by the customer at the declared address appearing in this document.
3. Failure by the end user to comply with the manufacturers' instructions for installation, maintenance or use.
4. The use of accessories which have not been approved by Blonder Tongue.
5. The application and/or use of any incorrect or abnormal electrical supply to the product.
6. Any defect in wiring or electrical connections which does not form part of the product at the time of the original purchase.
7. Neglect, misuse, or willful abuse of the product.
8. Any repairs or attempted repairs of the product by any person other than Blonder Tongue Service Department.
9. Any modification of the product by any person other than Blonder Tongue Service Department.
10. Fire, flood, war, civil disturbance, industrial action, acts of God or any other causes beyond the reasonable control of Blonder Tongue.
11. Any defect caused by lightning strike or power surges.
12. Shipping costs to return products to Blonder Tongue for warranty service.
13. Blonder Tongue will not in any circumstances be liable for any consequential loss or damages suffered by the customer whether directly or in directly related defect in the product to the extent permissible by law.
14. Repairs may not be effected without prior authorization from Blonder Tongue Laboratories.

D. GENERAL

1. The customer shall notify Blonder Tongue Laboratories in writing within ten days of any change of his or her address.
2. Customer must provide original **purchase receipt** and **serial number** to initiate extended warranty coverage.
3. The fee paid for the warranty is not refundable under any circumstances unless cancelled within seven days of purchase.
4. The customer shall take all reasonable precautions to maintain the product is maintained in good working order.
5. The warranty contract ceases to exist if the product is replaced or a credit is given to the customer. Any monies paid for the warranty contract are forfeited and not refundable. This is only applicable when the product is out of the manufacturer's warranty.
6. The extended warranty period as stated on the Extended Warranty Agreement shall be the governing period notwithstanding any additional supplier warranty on specific components.
7. The warranty shall in no way effect the terms and conditions of the sale agreement in terms of which the customer bought the product.
8. The extended warranty is limited to the terms and conditions herein contained
9. No agreement, varying, adding to, amended, deleting, or cancelling this warranty shall be effective unless given in writing (email is acceptable) and signed by or on behalf of both parties.
10. The cost of the extended warranty is 8% of the purchase price for a 1 or 2 year extension beyond the Blonder Tongue standard warranty. e.g. A product price of \$1000 will be \$80 for the 1st year (12 mos) and additional \$80 for 2 year (24 mos) extension for a total of \$160.
11. Warranty product return postage paid to: Blonder Tongue Laboratories, Inc.

Attn: Warranty Service Dept.
1 Jake Brown Road
Old Bridge, NJ 08857

Contact Blonder Tongue at 800-523-6049 ext. 555 to order extended warranty service.

Limited Warranty

Seller will at its sole option, either repair or replace (with a new or factory reconditioned product, as Seller may determine) any product manufactured or sold (or in the case of software, licensed) by Seller which is defective in materials or workmanship or fails to meet the applicable specifications that are in effect on the date of shipment or such other specifications as may have been expressly agreed upon in writing: (i) for a period of one (1) year from the date of original purchase for all stock hardware products (other than those specifically referenced herein below having a shorter warranty period); (ii) for a period of one (1) year from the date of original purchase, with respect to all MegaPort™, IPTV products, test equipment and fiber optics receivers, transmitters, couplers and integrated receiver/distribution amplifiers; (iii) for a period of one (1) year from the date of original purchase (or such shorter period of time as may be set forth in the license agreement specific to the particular software being licensed from Seller) with respect to all software products licensed from Seller (other than Core Product Software) that is (a) developed for a specific function or application, (b) complimentary to and does not function without the Core Product Software, and (c) listed with a specific model number and stock number in Seller's Price List ("**Non-Core Software**"); (iv) for a period of ninety (90) days from the date of original purchase, with respect to non-serialized products and accessories, such as parts, sub-assemblies, splitters and all other products sold by Seller (other than Core Product Software and Refurbished/Closeout Products) not otherwise referred to in clauses (i) through (iii) above. The warranty period for computer programs in machine-readable form included in a hardware product, which are essential for the functionality thereof as specifically stated in the published product specifications ("**Core Product Software**") will be coincident with the warranty period of the applicable hardware product within which such Core Product Software is installed.

Software patches, bug fixes, updates or workarounds do not extend the original warranty period of any Core Product Software or Non-Core Software.

Notwithstanding anything herein to the contrary,

(i) Seller's sole obligation for software that when properly installed and used does not substantially conform to the published specifications in effect when the software is first shipped by Seller, is to use commercially reasonable efforts to correct any reproducible material non-conformity (as determined by Seller in its sole discretion) by providing the customer with: (a) telephone or e-mail access to report non-conformance so that Seller can verify reproducibility, (b) a software patch or bug fix, if available or a workaround to bypass the issue if available, and (c) where applicable, replacement or damaged or defective external media, such as CD-ROM disk, on which the software was originally delivered;

(ii) Seller does not warrant that the use of any software will be uninterrupted, error-free, free of security vulnerabilities or that the software will meet the customer's particular requirements; and the customer's sole and exclusive remedy for breach of this warranty is, at Seller's option, to receive (a) suitably modified software, or part thereof, or (b) comparable replacement software or part thereof;

(iii) Seller retains all right, title and interest in and to and ownership of all software (including all Core Product Software and Non-Core Software) including any and all enhancements, modifications and updates to the same; and

(iv) in some cases, the warranty on certain proprietary sub-assembly modules manufactured by third-party vendors and contained in Seller's products, third party software installed in certain of Seller's products, and on certain private-label products manufactured by third-parties for resale by Seller, will be of shorter duration or otherwise more limited than the standard Seller limited warranty. In such cases, Seller's warranty with respect to such third-party proprietary sub-assembly modules, third-party software and private-label products will be limited to the duration and other terms of such third-party vendor's warranty, if any. In addition, certain products, that are not manufactured by Seller, but are resold by Seller, may carry the original OEM warranty for such products, if any. The limited warranty set forth above does not apply to any product sold by Seller, which at the time of sale constituted a Refurbished/Closeout Product, the limited warranty for which is provided in the following paragraph.

Seller will at its sole option, either repair or replace (with a new or factory-reconditioned product, as Seller may determine) any product sold by Seller which at the time of sale constituted a refurbished or closeout item ("**Refurbished/Closeout Product**"), which is defective in materials or workmanship or fails to meet the applicable specifications that are in effect on the date of shipment of that product or fails to meet such other specifications as may have been expressly agreed upon in writing between the parties, for a period of ninety (90) days from the date of original purchase. Notwithstanding the foregoing, in some cases the warranty on certain proprietary sub-assembly modules manufactured by third-party vendors and contained in Seller products, third party software installed in certain of Seller's products, and on certain private-label products manufactured by third-parties for resale by Seller will be of shorter duration or otherwise more limited than Seller limited warranty for Refurbished/Closeout Products. In such cases, Seller's warranty for Refurbished/Closeout Products constituting such third party proprietary sub-assembly modules, third party software, and private-label products will be limited to the duration and other terms of such third-party vendor's warranty, if any. In addition, notwithstanding the foregoing, (i) certain Refurbished/Closeout Products that are not manufactured (but are resold) by Seller, may carry the original OEM warranty for such products, if any, which may be longer or shorter than Seller's limited warranty for Refurbished/Closeout Products. All sales of Refurbished/Closeout Products are final.

To obtain service under this warranty, the defective product, together with a copy of the sales receipt, serial number if applicable, or other satisfactory proof of purchase and a brief description of the defect, must be shipped freight prepaid to Seller at the following address: One Jake Brown Road, Old Bridge, New Jersey 08857.

This warranty does not cover failure of performance or damage resulting from (i) use or installation other than in strict accordance with manufacturer's written instructions, (ii) disassembly or repair by someone other than the manufacturer or a manufacturer-authorized repair center, (iii) misuse, misapplication or abuse, (iv) alteration, (v) exposure to unusual physical or electrical stress, abuse or accident or forces or exposure beyond normal use within specified operational or environmental parameters set forth in applicable product specifications, (vi) lack of reasonable care or (vii) wind, ice, snow, rain, lightning, or any other weather conditions or acts of God.

OTHER THAN THE WARRANTIES SET FORTH ABOVE, SELLER MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND, EXPRESS OR IMPLIED, AS TO THE CONDITION, DESCRIPTION, FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR AS TO ANY OTHER MATTER, AND SUCH WARRANTIES SET FORTH ABOVE SUPERSEDE ANY ORAL OR WRITTEN WARRANTIES OR REPRESENTATIONS MADE OR IMPLIED BY SELLER OR BY ANY OF SELLER'S EMPLOYEES OR REPRESENTATIVES, OR IN ANY OF SELLER'S BROCHURES MANUALS, CATALOGS, LITERATURE OR OTHER MATERIALS. IN ALL CASES, BUYER'S SOLE AND EXCLUSIVE REMEDY AND SELLER'S SOLE OBLIGATION FOR ANY BREACH OF THE WARRANTIES CONTAINED HEREIN SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT F.O.B. SHIPPING POINT, AS SELLER IN ITS SOLE DISCRETION SHALL DETERMINE. SELLER SHALL IN NO EVENT AND UNDER NO CIRCUMSTANCES BE LIABLE OR RESPONSIBLE FOR ANY CONSEQUENTIAL, INDIRECT, INCIDENTAL, PUNITIVE, DIRECT OR SPECIAL DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT LIABILITY OR OTHERWISE OR ANY OTHER LEGAL THEORY, ARISING DIRECTLY OR INDIRECTLY FROM THE SALE, USE, INSTALLATION OR FAILURE OF ANY PRODUCT ACQUIRED BY BUYER FROM SELLER.

All claims for shortages, defects, and non-conforming goods must be made by the customer in writing within five (5) days of receipt of merchandise, which writing shall state with particularity all material facts concerning the claim then known to the customer. Upon any such claim, the customer shall hold the goods complained of intact and duly protected, for a period of up to sixty (60) days. Upon the request of Seller, the customer shall ship such allegedly non-conforming or defective goods, freight prepaid to Seller for examination by Seller's inspection department and verification of the defect. Seller, at its option, will either repair, replace or issue a credit for products determined to be defective. Seller's liability and responsibility for defective products is specifically limited to the defective item or to credit towards the original billing. All such replacements by Seller shall be made free of charge f.o.b. the delivery point called for in the original order. Products for which replacement has been made under the provisions of this clause shall become the property of Seller. Under no circumstances are products to be returned to Seller without Seller's prior written authorization. Seller reserves the right to scrap any unauthorized returns on a no-credit basis. Any actions for breach of a contract of sale between Seller and a customer must be commenced by the customer within thirteen (13) months after the cause of action has accrued. A copy of Seller's standard terms and conditions of sale, including the limited warranty, is available from Seller upon request. Copies of the limited warranties covering third-party proprietary sub-assembly modules and private-label products manufactured by third-parties may also be available from Seller on request. (Rev 1021)



One Jake Brown Road
Old Bridge, NJ 08857-1000 USA
732-679-4000 • Fax 732-679-4353
www.blondertongue.com